

FENDER LESS KIT type-2

APPLICATION : MONKEY 125 (JB02/03)

CODE : 691-1300100

REMARK :

Thank you for purchasing Kitaco product. Read and understand the instruction before installing.

ATTENTIONS (MUST READ)

This instruction is for installing parts to stock condition.

FENDER LESS KIT is dress-up parts. Not for other use.

FENDER LESS KIT is designed and made exclusive for MONKEY 125 (JB02/03), do not use on other models. Do not modify the way which is not listed or it will cause damage and trouble.

We are not responsible for violation of law or damages and accidents caused by assembling mistake and improper setting.

Please ask authorized mechanic for assembling and setting. Ask a specialist at specialty shop if you do not understand the role of the surrounding parts.

Refer to the manufacturer HONDA service manual when installation.

Please check and make sure each part of bolts and nuts are not loose before running.

Please contact a mechanic nearby immediately when you find something unusual.

PACKING LIST (Refer to the figures & illustration right side)

FIGURE	NAME	CODE	QTY	REMARK
1	NUMBER PLATE BASE	691-1452001	1	
2	BASE BLOCK T-2	MONKEY 125 691-1300101	1	
3	CAP BOLT	M6x15 060-0500015	2	
4	FLANGE HEXAGON BOLT	M6x12 062-0561012	4	
5	SPRING WASHER	6mm 091-0500006	4	
6	TIE WRAP (BLACK) MS TIE	100x2.5 700-9200100	2	Bundling and fixing the harness
7	FENDER LESS BASE PLATE	691-1300001	1	
8	WASHER	9.5x22x2.0 691-1300004	3	
9	REFLECTOR (SLIM)	19x98 801-0800003	1	
10	LED LICENSE LAMP Assy T-2	MONKEY 125 691-1300102	1	
-	WASHER	3mm -	2	
-	NUT	3mm -	2	
11	PROTECT CAP (BLACK)	φ 2.5 998-9000201	2	

OPTIONAL PARTS (Sold separately)

FIGURE	NAME	CODE
OP1	CLASS STICKER & PLATE SET	801-0800920

HOW TO INSTALL (Refer to the manufacturer service manual when installation)

Remove exteriors

When removing, be careful not to damage the cover caw.

1) Remove the genuine rear fender D and rear fender A. (Reuse clip nut)

At this time, remove the license light 2P coupler connection before removing rear fender A.

Install fender less


2) Install fender less parts. (Refer to illustration right side)

Firstly, install the base block to the fender less plate, then install the vehicle.

Reroute and connect harness, tighten it with tie-wrap not to sag.

3) Tighten bolts which used to be temporarily tightened. Make sure there is no loosen, tightened stable, tail right activates correctly before driving.

REMOVING & INSTALLING THE EXTERIOR (Refer to the manufacturer service manual when installation)

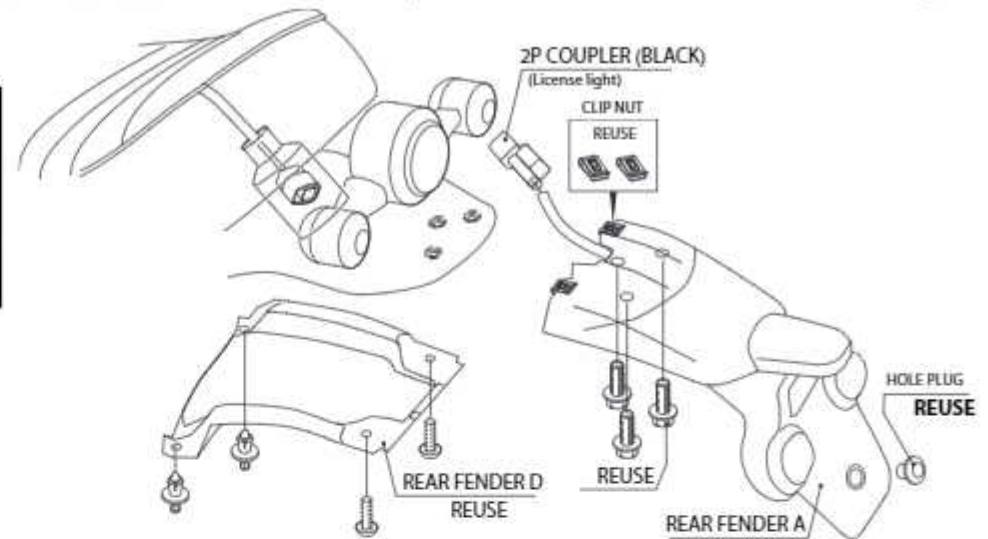

Reuse genuine parts that are not included in the kit.

Change the reusing parts with new ones if there are significant blem, fatigue wear.

GENUINE PARTS (REUSE)

FIGURE	NAME	QTY	REMARK
N1	REAR FENDER BOLT	x3	TORQUE : 10N · m
N2	CLIP NUT	x2	
N3	RUBBER	x1	

BOLT NUT TIGHTENING TORQUE

6mm 10 N·m (1.0 kgf·m)

3mm 1 N·m (0.1 kgf·m)

